



## Parts List for NPS1018 Type 1

| Item Number | Part Number | Description     | Qty Required |
|-------------|-------------|-----------------|--------------|
| 1           | 90507629    | SWITCH BOOT     | 1            |
| 2           | 90507634    | ROCKER SWITCH   | 1            |
| 3           | 90507642    | O-RING          | 1            |
| 4           | 90507619    | CLAMSHELL SET   | 1            |
| 5           | 5100035-03  | SPRING          | 2            |
| 6           | 5100034-00  | TERMINAL BLOCK  | 1            |
| 7           | 90507633    | LANYARD         | 1            |
| 8           | 90509371    | BATTERY COVER   | 1            |
| 9           | 90507618    | HANDLE ASSEMBLY | 1            |
| 10          | 90515364    | POWERHEAD ASSY. | 1            |
| 11          | 90507641    | O-RING          | 3            |
| 12          | 90507638    | EXTENTION POLE  | 1            |
| 13          | 90507646    | EXTENTION POLE  | 1            |
| 856         | PSA-120     | BRUSH           | 1            |
| 856         | PSA-110     | BRUSH           | 1            |
| 856         | PSA-140     | BRUSH           | 1            |
| 856         | PSA-130     | BRUSH           | 1            |
| 862         | 90507656    | CARRYING BAG    | 1            |
| 866         | HPB18       | BATTERY         | 1            |
| 867         | 5102026-00  | BATTERY CAP     | 1            |
| 871         | 5103069-12  | CHARGER         | 1            |

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.